



Geeignet für Kabelklemme: Gewinde PG von PG bis PG21
Herstellungsdatum: innerhalb des Kastens.



Apta para prensaestopas: PG de PG7 a PG21
de M12x1.25 a M25x1.5
Fecha de producción: en la caja.





Indicada para pressor de cabos: passo PG de PG7 a PG21
passo métrico de M12x1.25 a M25x1.5
Data de produção: no interno.



Egnet til kabelmuffer: PG7 til 21
M 12 x 1,25 til M 25 x 1,5
Produksjonsdato: inne i kassen.




Geschikt voor pakkingsbussen: van PG7 tot PG21
M12x1.25 a M25x1.5
Productiedatum: aan de binnenkant.

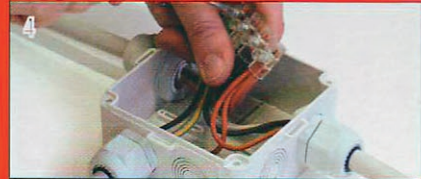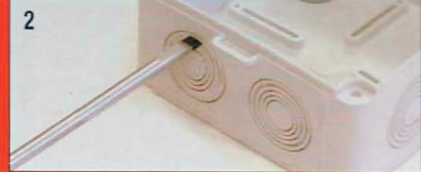

INSTALLAZIONE ORIZZONTALE - HORIZONTAL INSTALLATION
INSTALLATION HORIZONTALE - WAAGRECHTE INSTALLATION
INSTALACIÓN HORIZONTAL - INSTALAÇÃO HORIZONTAL
HORIZONTAL INSTALLASJON - HORIZONTAL INSTALLATIE

INSTALLAZIONE VERTICALE - VERTICAL INSTALLATION
INSTALLATION VERTICALE - ENKRECHTE INSTALLATION
INSTALACIÓN VERTICAL - INSTALAÇÃO VERTICAL
VERTIKAL INSTALLASJON - VERTICALE INSTALLATIE

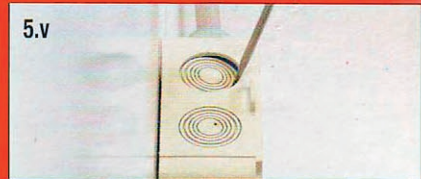

Attendere la reticolazione completa

Esperar hasta la reticulación completa

Wait for the complete cross-linking

Esperar a reticulação completa

Attendre la réticulation complète

Vent på fullstendig tverrbinding

Auf die komplette Vernetzung warten

Wacht voor volledige netvorming

